

Healthcare

Maui: Floor Standing Sluice

Architects
Data File

Product Detail



Top inlet no grid shown

Product: Maui
Code: HP2650-C

Is sue: 1
Date: 13/01/26

Product description:




Shrouded sluice with concealed fixings for duct fixing or if front fix then access panels to wall pin from inside, 600x700x600mm. Back or top entry with Polypropylene P or Strap. 316 grade and hinged grid available on request.

Product: Maui
Code: HP2650T110P
Maui HP2650B110
Maui P
Maui HP2650T110S
HP2650B110
S HP2650-C

Technical Detail:

Material: 1.4301 <304> SS 1.5mm
Grill: 10mmØ Bar Hinged (Optional)
Finish: Satin Polished
Hopper: 380mmØ x 366mm
Hopper Outlet: 110mmØ
Flush Inlet: 1 ½" BSP to suit 38mm Tube (Top or rear inlet options)
Fixing: Back to wall floor standing

Linedrawing:

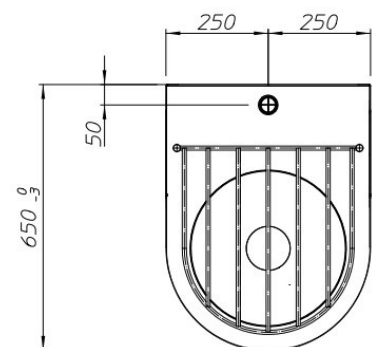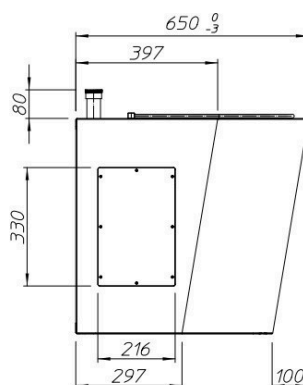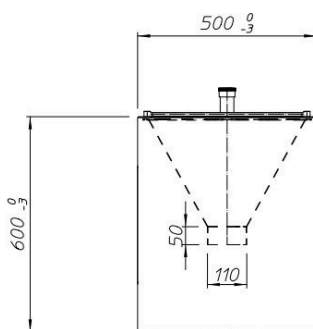

Healthcare

Maui: Floor Standing Sluice

Packaging Detail

Text here....

Image Here....

Healthcare

Maui: Floor Standing Sluice

Installation Detail

ASSEMBLY INSTRUCTIONS FOR STAINLESS STEEL MAUI FLOOR STANDING SLUICE (HTM 64)

Stainless steel floor standing sluice can be supplied with the following items as an option – please check you have all items required before proceeding.

- Stainless Steel floor standing sluice 75mm outlet or 110mm outlet (HP2650/75 or HP2650/110)
- P Trap 75mm outlet HP2650/75/P (Optional)
- P Trap 110mm outlet HP2650/110/P (Optional)
- S Trap 75mm outlet HP2650/75/S (Optional)
- S Trap 110mm outlet HP2650/110/S (Optional)

Do not remove any protective plastic coating from the stainless steel until the assembly is completed. Exceptions to this rule occur if it will not be possible to reach the coating after fitting.


ASSEMBLY OF THE FLOOR STANDING SLUICE:

- 1) Remove access panels from both sides of the sluice.
- 2) Offer sluice to the wall position and mark through, also mark position of trap & inlet (If rear inlet).
- 3) Fix unit to wall either front fix or through the wall into the duct (Fixings by others)
- 4) Connect the push fit trap to the Hopper and to the soil pipe either through the access panels or from the duct – See image of traps below.
- 5) Re-fit the access panels.
- 6) Connect flushing inlet to either the top inlet from the front or rear inlet in the duct.
550mm gap between cistern and hopper (excluding hopper inlet pipe)

PLEASE NOTE:

The unit can be offered without access panels however you would need to gain access for all fixings, trap and inlet (if rear inlet) from the duct side.

'S' Trap 'P' Trap

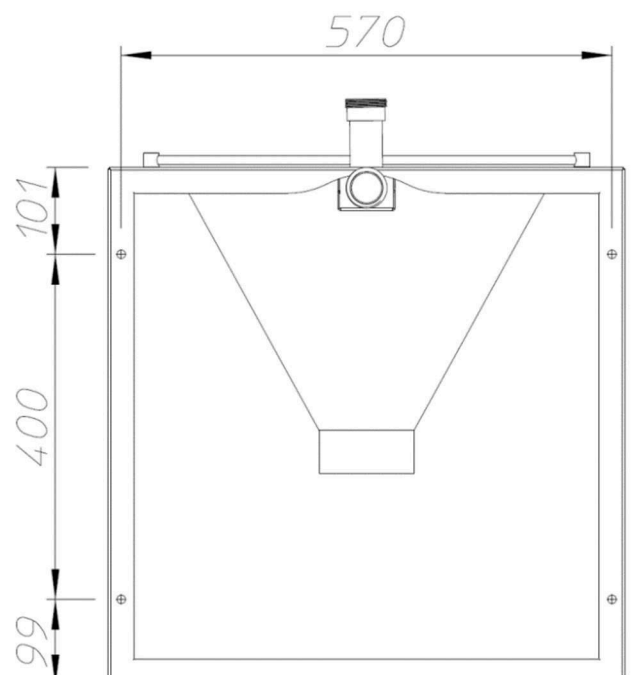

Healthcare

Maui: Floor Standing Sluice

Spare Part Detail

Text here....

Image Here....

Healthcare

Care Of Your Product

HANDLING AND FIXING CAUTION

Take care when handling and fixing this product. Exposed edges of the stainless steel, including tap holes, upstand, overflows and wastes etc. may cause harm if handled without due caution. When using the fixing clips supplied with inset sinks avoid touching the two prongs on the area of the clip that grips the underside of the worktop.

TO THE STOCKIST

Please store products in a cool, dry area.

Sinks should, where possible be stood on their ends supported by battens with the bowl uppermost.

If sinks are nested with bowls inside one another, place some dry cushioning material between them to protect the surfaces.

TO THE INSTALLER

DO handle with care to avoid scuffs and scratches during installation.

DO check that edges of sinks are dead level so that water will flow off the draining board.

DO NOT over-tighten plumbing or other mechanical fixtures.

DO NOT remove the plastic protective film applied to certain products until all installation work has been completed.

DO NOT stand/kneel on the drainer of sinks.

do not drop mortar, plaster or similar substances onto the stainless steel.

TO THE USER

Stainless steel will give you a lifetime of trouble free use as long as you follow a few simple rules. If it appears to mark, don't worry, it is usually not the steel, but something deposited on it, which has caused the apparent stain. DO - wash the product before use. DO - clean the product regularly, using JIF, Goddard's, or similar recommended cleaners. Follow the manufacturer's instructions carefully. Always rinse well with clean water and dry the surface with a soft cloth. DO - use nylon or bristle brushes, not metal scrapers or wire brushes to loosen stubborn stains. Never use wire wool pads, as they can scratch the steel. DO - take care when handling sharp objects as they can scratch the surface of the steel. Any scratches will blend together over a period of time and become less noticeable with age. There is no detriment to the corrosion resistance or general performance of the material.

DO NOT - allow undiluted bleach to remain in contact with stainless steel (remember dishwasher powders, sterilising agents and similar products all contain chlorides). Black pit marks can result and permanent damage can be caused. Dilute to manufacturer's instructions and always rinse with clean water. **DO NOT** - soak clothes in bleach solutions for long periods. Always rinse bowl with clean water after use. **DO NOT** - leave such substances as Mortar, Grouting cement, soldering flux, photographic developing fluids, silver dip, denture liquids or food acids on the surface of the steel. Clean immediately and rinse well with clean water. **DO NOT** - allow corrosive foodstuffs, such as fruit juices, damp salt, vinegar, mustards, pickles and mayonnaise to remain on the surface of the steel for long periods. Wash and rinse away. **DO NOT** - let hard water cause a build-up of lime or chalk deposits which can sometimes be seen as a greyish film. Clean regularly with recommended cleaners to avoid this problem and always wipe dry with a soft cloth. **DO NOT** - worry if the steel appears to rust. Usually it's deposits of wire wool scouring pads, plumbers swarf, particles from rusting storage tanks or other deposits on the surface which can be cleaned and rinsed away following your usual cleaning procedure. Bases of washing up bowls can harbour such deposits - check regularly. **DO NOT** - use coarse grit cleaners or wire wool pads when cleaning the steel. They will scratch the surface. **DO NOT** - leave carbon steel objects such as bottle openers, scissors, whisks and other kitchen objects standing on the surface for long periods, they can rust and leave marks.

DO PLEASE ENJOY YOUR NEW STAINLESS STEEL PRODUCT

Healthcare

CleaningRegime

Problem	Corrective Treatment	Comments
RoutineCleaning.	Washing up liquid, all-purpose cleaning liquid, swab with cloth or sponge rinse well.	Satisfactoryon all surfaces.
Oil & Grease Marks.	Degreasing fluid or cellulose thinners.	Rinse with soap & water.
Stubbornmarks, stains and light discoloration.	Mild abrasive creams (Sif / Shiny sinks).	Heavy stains can be loosened by soaking with Metsoak or Hi-Phos. Rinse thoroughly after soaking as these products cause rust type marks if left.
Heavydiscoloration or heat tint.	Use metal polish (Brasso, Goddard's S/S Cleaner, Bar Keepers Friend) or a light non- metallic abrasive pad. Dura glit.	Use only on grain finish surfaces and work in direction of grain as slight scratching will occur.
		Bleach solutions including over the counter brands must only be used in dilution as instructed and thoroughly rinse immediately after application as chloride containing compounds will cause corrosion on all grades of stainless steel.
Lime Scale	Apply descaler as instructed, agitate & allow to soak, re apply if not fully removed. (Met-soak DX4920 or Hi-Phos)	Rinse thoroughly after application and wipe dry as rust type stains can result if left undiluted on surface

There arealso products on the market which help to reduce the marks left by fingers and hands one of which is 3m's stainlesssteel cleaner, also of help is baby oil very lightly applied to the surface.

SANITIZINGURINAL BLOCKS

The useofthese products must be done with the knowledge that they can in some instances react with other cleaning agentsoron their own and cause scarring of the surface of the stainless steel. It is advisable to move them around the channelfrequently to reduce their effect on one concentrated area.

Healthcare